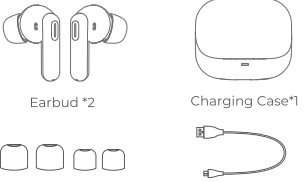

 

 <p style="text-align: center;">POWERTREND BERLIN TRUE WIRELESS STEREO EARBUDS USER MANUAL</p>	<p style="text-align: center;">Product and accessories</p>  <p style="text-align: center;">Earbud *2 Charging Case*1 2 pairs of ear caps (L/S size, M pre-installed) Type-C Charging Cable *1</p>  <p style="text-align: center;">User manual *1 Certificate of quality *1</p> <p style="text-align: right;">1</p>	<p style="text-align: center;">Description of product structure</p>  <p>Remark Please remove protective film of earbuds and keep the case is full charged when you first time use the product.</p> <ol style="list-style-type: none"> 1. Multi-function button (MFB) 2. Earbud indicator 3. Power LED indicator 4. Charging port 5. Reset button <hr/> <p style="text-align: center;">Wearing method</p> <p>Gently insert the earbuds into the ear then adjust the appropriate comfort.</p>  <p style="text-align: right;">2</p>	<p style="text-align: center;">Basic function</p> <p>Power on, Bluetooth connection -Follow the steps (Please confirm that your phone is built-in Bluetooth function.)</p> <ol style="list-style-type: none"> 1. Power on Open the charging case, the earbuds enter the pairing mode automatically while the indicator of one earbud flashes white. 2. Turn on Bluetooth on your device and select "PT Berlin" referring to your phone instructions. Pairing mode can just last 3 minutes. If you miss the pairing time, you need to restart the device and operate follow the procedural steps mentioned above. <p>*Note:</p> <ol style="list-style-type: none"> a). PT Berlin remembers previously connected devices. When turned on, the earbuds attempts to reconnect to previously connected devices. <p style="text-align: right;">3</p>	<p>b). PT Berlin will disconnect when deviate the working range of Bluetooth. The earbuds will reconnect automatically if you come back to the range in 3 minutes.</p> <p>Power off Put the earbuds into the charging case and close the case.</p> <p>Answer incoming calls Double tap the left or right MFB.</p> <p>End the call Double tap the left or right MFB.</p> <p>Decline incoming call Long press the left or right MFB for 1s.</p> <p>One key for voice assistant Both earbuds work: Long press the left MFB for 2s. Single earbud work: Long press the</p> <p style="text-align: right;">4</p>
<p>MFB for 2s of the working earbud.</p> <p>ANC mode Both earbuds work: Long press the right MFB for 2s to switch "Ambient Sound" -"ANC ON"- "ANC OFF".</p> <p>Music playing</p> <ol style="list-style-type: none"> 1. Play/Pause: Double tap the left or right MFB. 2. Previous song: Triple press the left MFB. 3. Next song: Triple press the right MFB. <p>Charging</p> <p>-Case Charge the case using the Type-C cable connected to a computer or wall charger. When the case is charging, the power LED indicator of the case turns red, and turns white after fully charged.</p> <p>Mono mode (Take out any earbuds as a unilateral Bluetooth earbud)</p> <p style="text-align: right;">5</p>	<p>(Note: Single channel mode only needs to remove one of earbuds from the charging case, if two earbuds are removed before connection, the earbud will be used in TWS mode by default, and the TWS connection will be automatically realized)</p> <ol style="list-style-type: none"> 1. Take out one earbud from charge case, the earbuds automatically turn on and reconnect to previous connected devices. 2. Switch from one earbud to the other earbud when playing music, taking out the other earbud from the charging case and these two earbuds will connected automatically. Both earbuds will play music automatically and then put the earbud which do not need anymore into the charging case and the switching process completes. (Note: Call mode is applicable) 3. Please refer to the TWS mode for more functions. <p style="text-align: right;">6</p>	<p>Restore factory settings If the earbuds can't pair frequently, please restore the factory settings. Put both of the earbuds into the charging case and close the cover. Open the case again, within 3 minutes, press the reset button for 5s, while the indicator of the case flashes for 5 times, the earbuds will enter the pairing mode again , search the "PT Berlin" Bluetooth pairing name with the mobile phone and connect again.</p> <p>Specifications Bluetooth Version: V5.3 Wireless Working Range: 10M (Without obstacles) Earbud Battery: 30mAh*2 Charging Case Battery: 300mAh Play Time: 5h (60% vol.) / 4h (60% vol. with ANC ON) Talk Time: 4h Case Charging Time: 2h Speaker Size: Ø10mm*2</p> <p style="text-align: right;">7</p>	<p>Input Voltage/Current: DC 5V/1A USB Port: Type-C</p> <p>Warnings</p> <ol style="list-style-type: none"> 1. Please follow the instruction to operate. 2. Please charge the earbuds with input power below 5V/1A, in order to protect the battery. 3. Please store or use the earbuds in a normal temperature environment. 4. Please do not use this product near the water. Do not immerse this product in any liquid or splash any liquid on this product. 5. Please keep the earbuds from heat source, such as radiators, hot air regulators, stoves, or other heat generating instruments. As it is not anti high temperature. 6. Don't jam the ports of the earbuds, such as charger port, LED port and microphone etc.. 7. In order to protect your hearing and <p style="text-align: right;">8</p>	<p>extend the speaker service life, it is not recommended to adjust the volume to the maximum level for a long time.</p> <p>8. Whatever reasons damage the earbuds, please feel free to contact our after-sales staff in time rather than repair by yourself. Otherwise, you will accept without after-sales service.</p> <p style="text-align: right;">9</p>